

deutsch  
English  
français


Ersatzteilliste und Servicehinweise  
Spare parts list, service instructions  
Nomenclature des pièces détachées et instructions de montage

# BeA<sup>®</sup>

Typ  
Type  
Tipo

SK 355 - 222E

Art.-Nr. 12100205

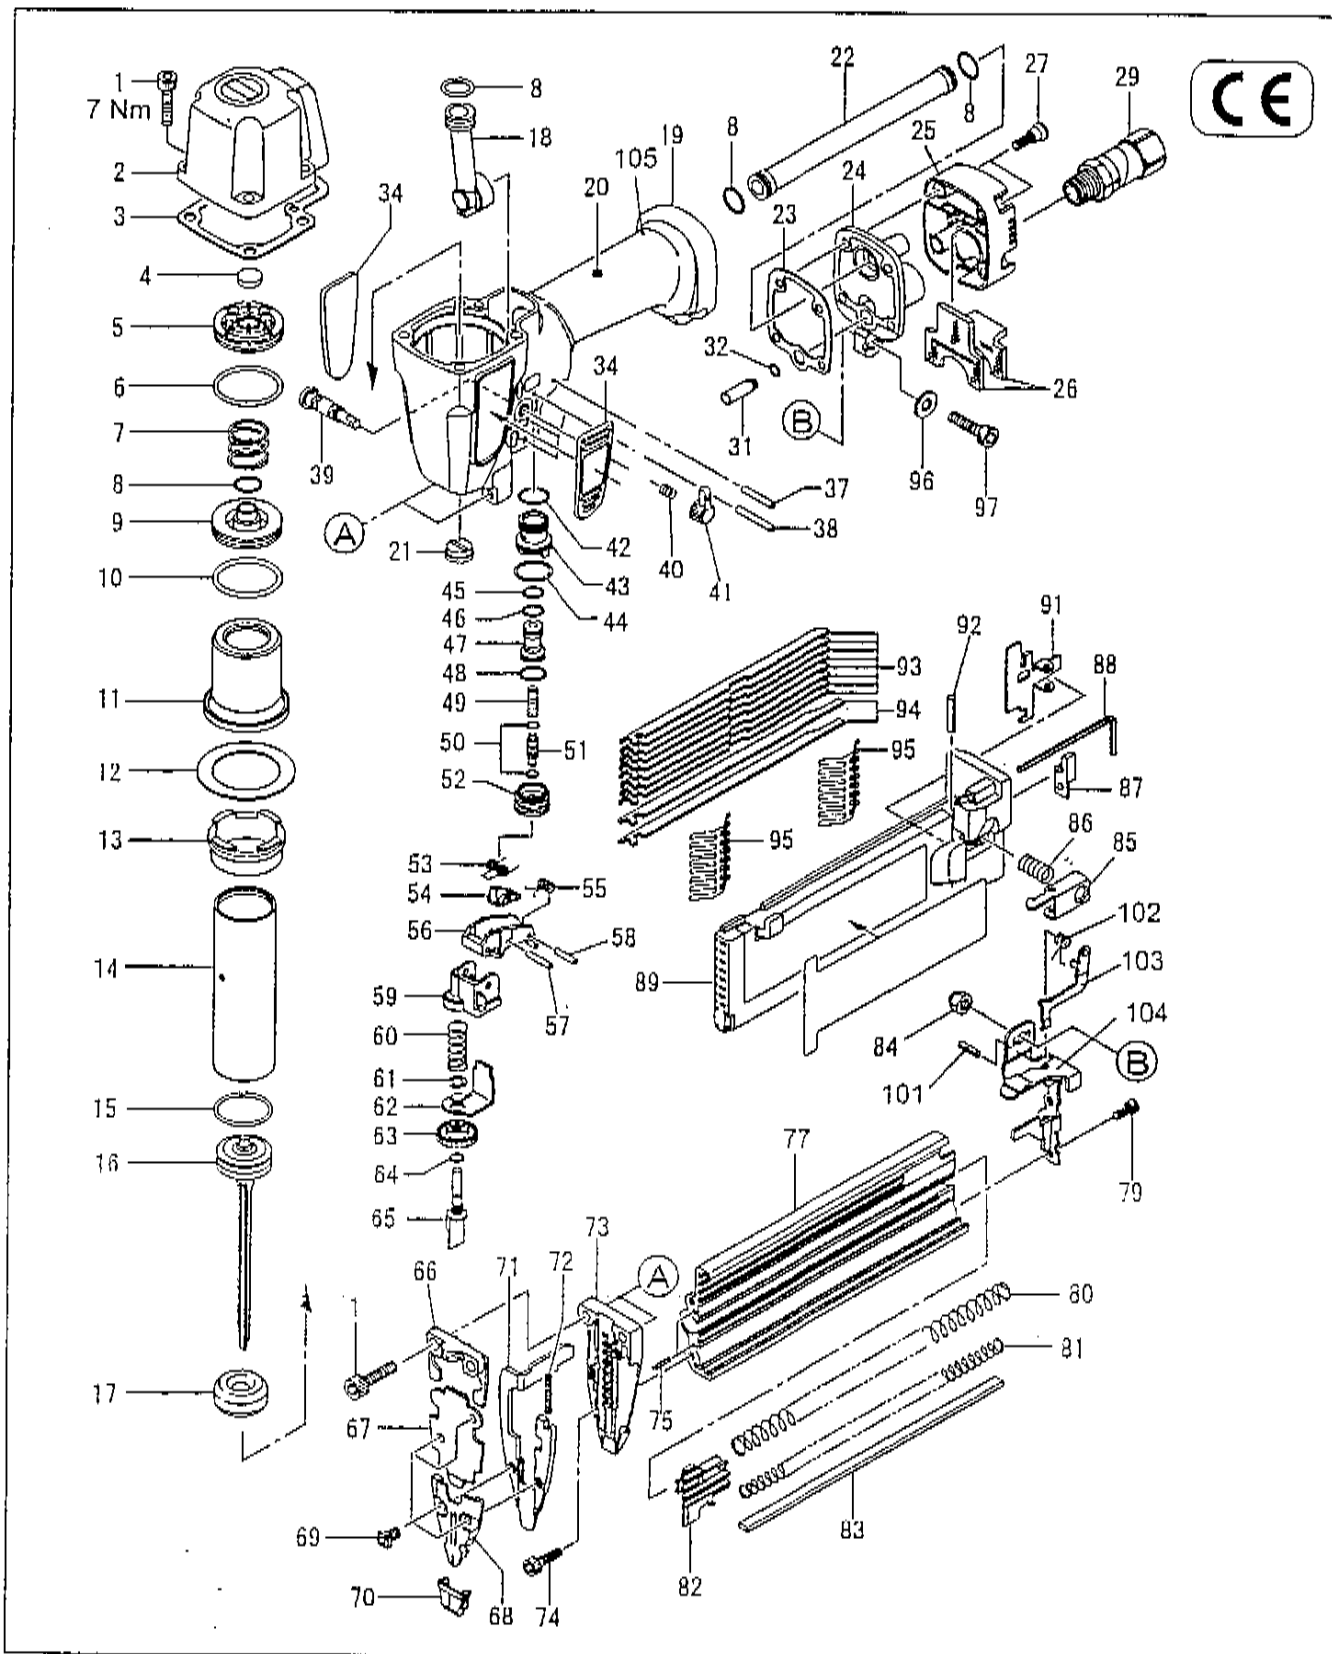

1	Zylinderschraube Allen screw Vis Allen Tornillo allen	13301122	21	Buchse Nozzle Douille Casquillo	14505044	54	Schallhebel Einzelaust. Trigger single actuation Lever coup par coup Gatillo tiro a tiro	14502605	82	Vorschieber Pusher Chariot Empujador	14502621
2	Kappe Cap Capuchon Cabeza	14505034	22	Rohr B Tube B Tuyau B Tubo B	14505045	56	Auslöser Trigger Levier de détente Gatillo de disparo	14505052	83	Führungseiste Bar Cale de guidage Barra	14502622
3	Dichtung Gasket	14505035	23	Dichtung Gasket Douille Junta obturadora	14505046	57	Spannstift Roll pin	14502635	84	Sicherungsmutter Safety nut Ecroû de sûreté Tornillo de seguridad	14501088
4	Douille Junta obturadora	14500114				58	Douille fendue Pasador	14502636			
5	Kappeneinsatz Cap insert Douille supérieure Cabeza superior	14502582	24	Endstück End cap Piéza terminal Pieza final	14505047	59	Auslösebügelführung Safety yoke guide Guide pour sécurité Guía del estribo de seguridad	14505053	85	Sperrhebel Click lever Lever de blocage Palanca de bloqueo	14502626
6	O-Ring	13301726	25	Gehäusedeckel Exhaust cover Couvercle de carter Cartero tapa	14505048	61	Sicherungsscheibe Circlip Clips Clip	13300347	87	Halterung Holding bar Support Barra de soporte	14500170
8	O-ring	14500117							93	Support Barra de soporte	14505064
10	Joint torique	14500120									
15	Aro torico	14500291									
32	Aro torico	14500310									
42		14500653									
44		14500664									
45		14502033									
46		14502034									
48		14502035									
50		14500310									
64		13301726									
7	Druckfeder Compression spring Ressort de pression Muelle de presión	13301727									
40		14500844									
49		13302639									
60		13302640									
72		13302641									
80		13302642									
81		13301728									
86		13302643									
9	Hauptventil Main valve Soupape principale Valvula principal	14502583	26	Schalldämpfer Exhaust filter Amortisseur de bruit Silenciador	14505049	62	Auslösesicherung A Contact arm A Palpeur de sécurité A Estribo de seguridad A	14505054	88	SK-Schlüssel Hex bar wrench Clé hexagonale mètre Llave hexagonal	13301020
11	Zylinderdichtung Cylinder seal Joint de cylindre Sellado cilindro	14505036	27	Schraube Screw Vis Tornillo	14505050	63	Einstellscheibe Adjust dial Vis régulatrice Tuerca de ajuste	14502609	89	Magazinschlitten Slider seal assembly Coulisau de magasin Corredora	14505063
12	Zylinderscheibe Cylinder washer Rondelle Arandela	14505037	29	Stecknippel Plug-in nipple Raccord enfichable Manguito enchufable	14000248	65	Auslösesicherung B Safety yoke B Palpeur de sécurité B Estribo de seguridad B	14502610	91	Entriegelungplatte Magazine release Plaque de fermeture Desconexion cargador	14502625
13	Ruckschlagventil Check valve Clapet anti-retour Valvula antirretorno	14505038	31	Sicherheitsventil Safety valve Valve de sécurité Valvula de seguridad	14502594	68	Treiberführung A Driver guide A Guide-marteau A Guía martillo A	14505055	94	Führungsschiene Pusher guide Cale de guidage Rail guía	14502624
14	Zylinder Cylinder Cylindre Cilindro	14505039	34	Schutzgummi Protective rubber Protection en caoutchouc Protector de goma	14502587	67	Treiberführung B Driver guide B Guide-marteau B Guía martillo B	14505056	95	Blattfeder Plate spring Resort a lame Muelle placa	14502627
16	Kolben, kompl Piston, unit Piston, complet Piston cpl	14505040	37	Spannriemse Split pin Douille fendue Pasador	13300254	68	Auslösesicherung D Contact arm D Palpeur de sécurité D Estribo de seguridad D	14505057	96	Scheibe Washer Rondelle Arandela	13300467
17	Puffer Dumper Amortisseur Amortiguador	14505041	38	Spannriemse Split pin Douille fendue Pasador	13302685	69	Schraube Screw Vis Tornillo	14500156	103	Vorschieberhaken Pusher hook Chariot Gancho empujador	14502630
18	Rohr A Tube A Tuyau A Tubo A	14505042	39	Belüftungssperre Trigger lock lever Lever de blocage de la commande Dial cierre gatillo	14502786	70	Kontaktkappe Contact tip Capuchon Cabeza de contacto	14505058	104	Lasche Hanger Plaque d'ancrage Placa con ganchos	14505062
19	Gehäuse Body Corps Cuerpo	14505043	41	Sperrknopf Trigger lock dial Disque de blocage Cierre gatillo	14502789	71	Auslösesicherung C Contact arm C Palpeur de sécurité C Estribo de seguridad C	14505059	105	Griffband Grip end tapa Ruban pour la poignée Banda para el mango	14406099
20	Griffband Grip end tapa Ruban pour la poignée Banda para el mango	14406099	43	Ventilbuchse Trigger valve housing Douille de soupape Casquillo valvula	14502601	73	Werkzeug Teil 2 Back nose Plaque arrière Placa guja	14505060			
			47	Steuerventil Pilot valve Vanne pilote Valvula piloto	14505051	74	Zylinderschraube Allen screw	13301105			
			51	Ventilschaft Valve shaft Corps de la soupape Vástago valvula	14502603	79	Vis Allen Tornillo allen	13301103			
			52	Ventildeckel Valve cap Capuchon de soupape Tapa valvula	14502604	97	Vis Allen Tornillo allen	13301119			
			53	Torsionsfeder Torsion spring	14502631	75	Spannriemse Split pin	13300239			
			55	Resort de torsion Muelle de torsion	14502632	92	Spannriemse Split pin	13300253			
			102	Resort de torsion Muelle de torsion	14502620	101	Douille fendue Pasador	13300249			
						77	Magazin Magazine Chargeur Cargador	14505061			